

Connections Guide

1. Receiver to TV

- ① Connect SPDIF to Digital audio input of the equipment(Digital Audio)
- ② Connect the VIDEO and AUDIO L, R to VIDEO IN and AUDIO L, R IN of TV.
- ③ Connect the HDMI to HDMI input of TV



Troubleshooting

| Problem | Solution |
|---|--|
| No Picture | <ul style="list-style-type: none"> To match the STB system with your TV system (PAL/NTSC), press V.Format button until a picture is displayed. Check the video output port is firmly connected to the TV or VCR. Check that you have selected the Video Input on your TV. Check the brightness level of the TV. Check the resolution that your TV supports, and set the proper resolution with the remote <i>Resolution</i> button to obtain a picture. |
| Does not display any message on the front panel. | <ul style="list-style-type: none"> Check the main power cable and check that it is plugged into a suitable power outlet. |
| No Sound | <ul style="list-style-type: none"> See 'No Picture' above. Check the volume level of the TV and STB. Check the Mute status of the TV and STB. |
| Remote Control does not operate | <ul style="list-style-type: none"> Point remote control directly towards the STB. Check that the STB button lights up when you press any button. Check and replace batteries. |

Included Accessories

| | | | | |
|---|---|---|---|--|
|  |  |  |  |  |
| TV bracket | Remote control | Power adapter | HDMI Cable | Quick Installation |
|  |  |  | | |
| Remote control extender | AV Phone jack cable | Joystick (Optional) | | |

* Note : Please visit www.formuler.tv for more information.